salto
INSPIRED ACCESS

INSTALLATION GUIDE

XS4 One S Keypad for European mortise locks

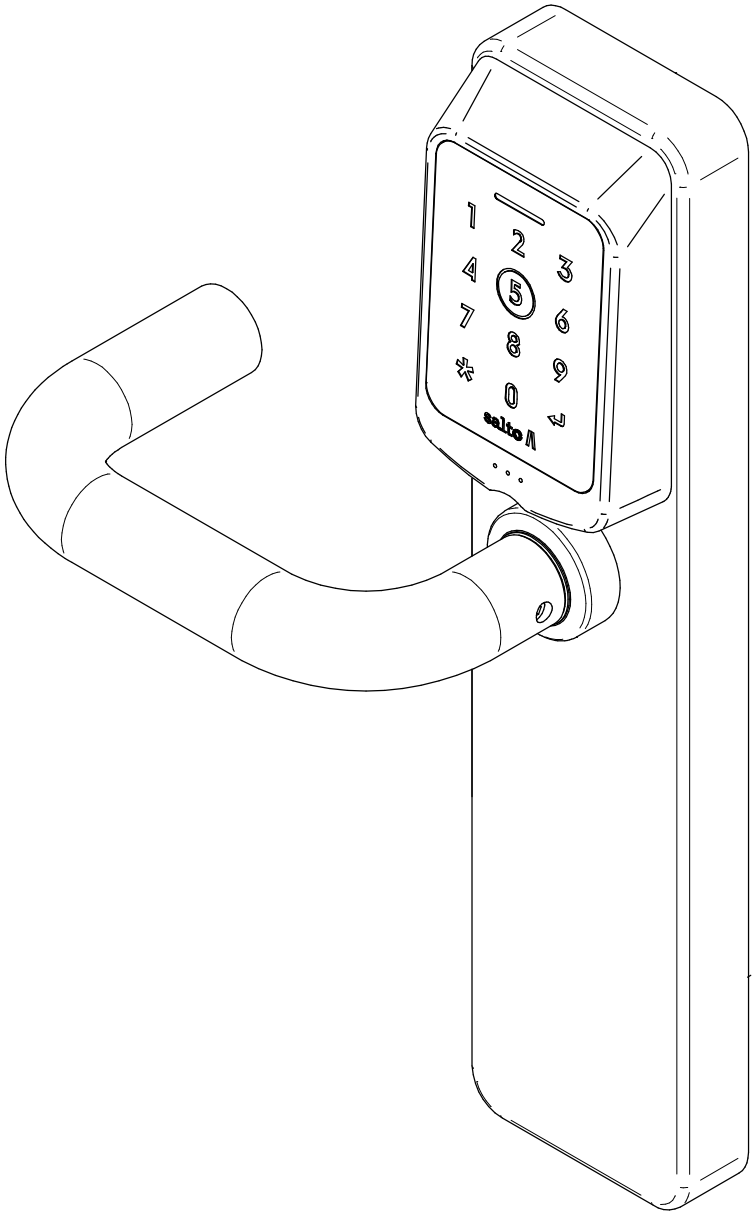

The Salto XS4 One S wide body version is designed to fit most European profile doors and mortise locks standards. Easy to install and retrofit, it can replace your existing door hardware and fits any door with a broad range of different models and functions. The XS4 One S incorporates the latest BLUEnet wireless and mobile credentials technology to accommodate access control needs of both today and tomorrow.

MODELS: ELECTRONIC INFO. W61MK

SALTO ECOSYSTEM

Copyright © 2024 Salto Systems, S.L.

E i 950 xxK..series

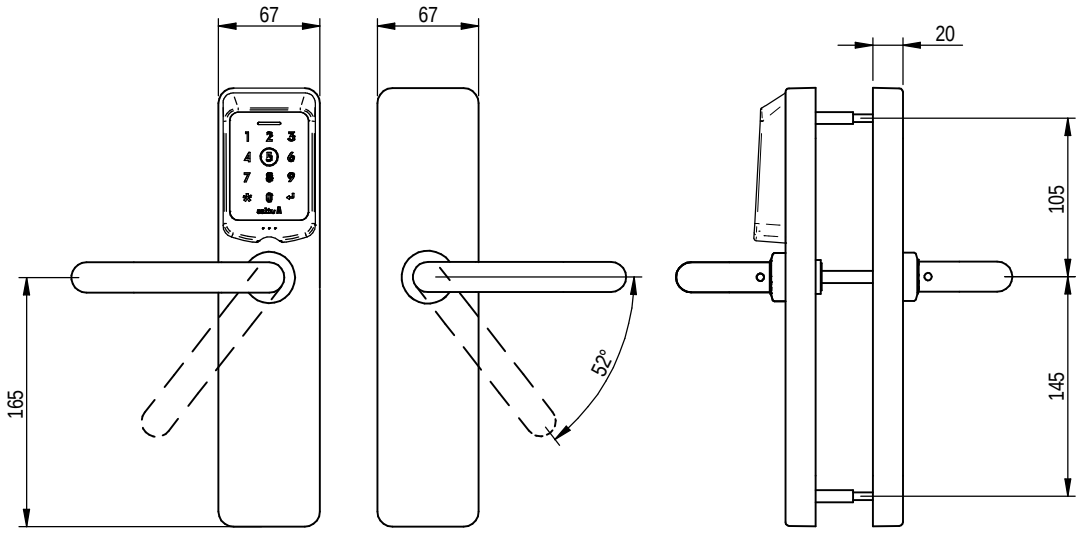

E i 9xx.. series		E i 9xx..E5 series	
OUTSIDE	INSIDE	OUTSIDE	INSIDE
IP54	IP44	IP55	IP54

For more information CLICK HERE



TORX 20 (x2)

TORX 20 (x1)

TORX 20 (x4)

ALLEN 3 (x2)



BOLT *
(Depending on door thickness)

	t Door thickness	L	
3	32 - 47mm	35 mm	-
4	45 - 60 mm	50 mm	-
6	60 - 75 mm	30 mm	x2
7	75 - 90 mm	45 mm	x2
9	90 - 105 mm	30 mm	x4
1	105 - 120 mm	45 mm	x4
2	32 - 53 mm	35 mm	-
A		35 mm	-
B		45 mm	-
5		45 mm	-

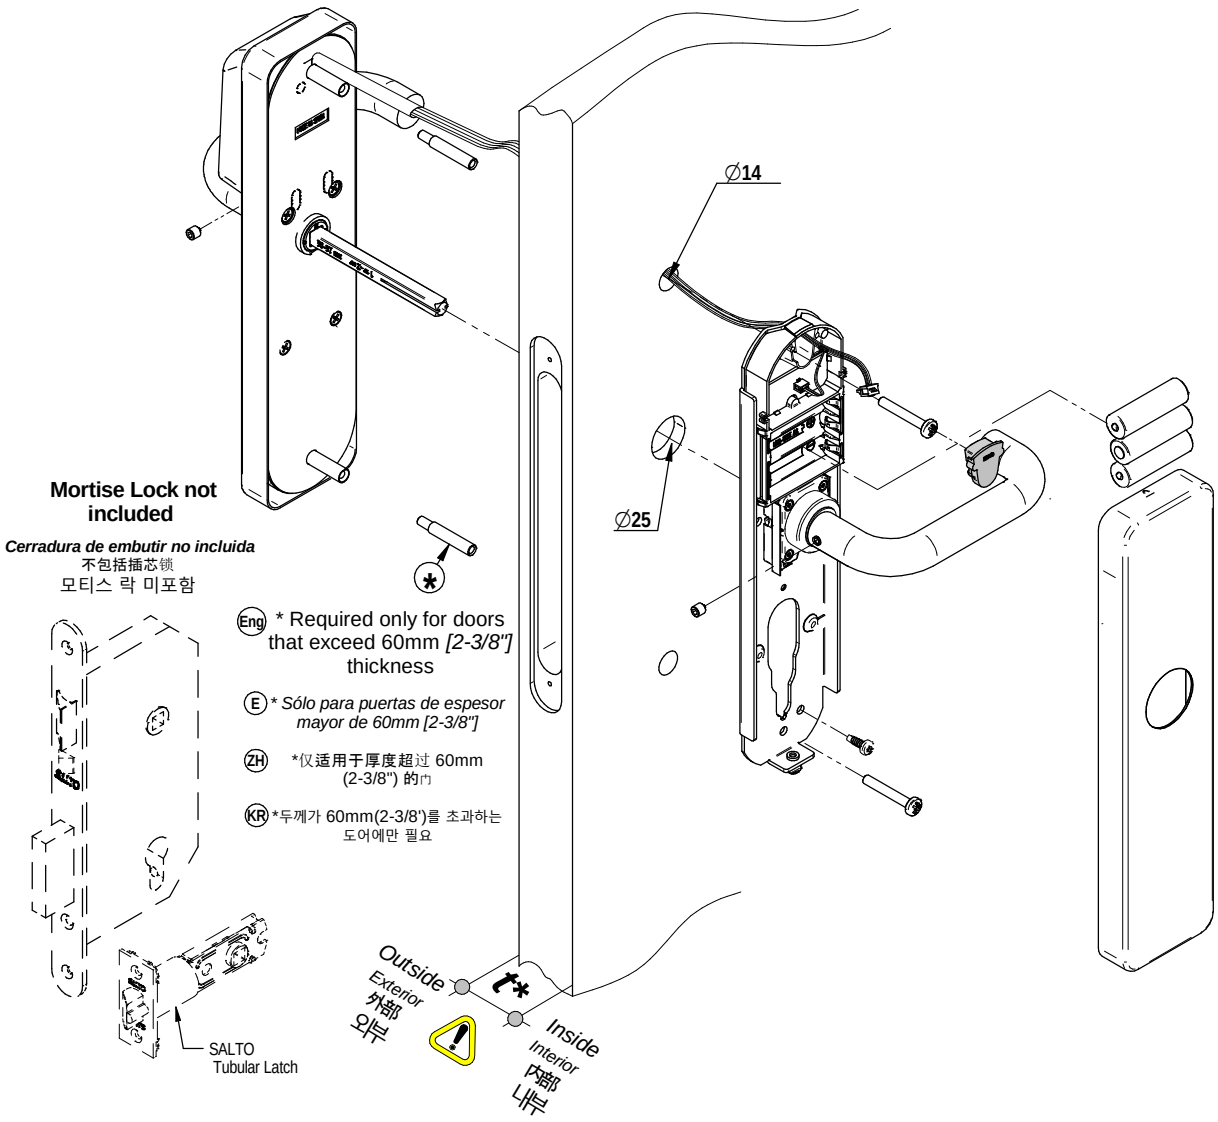

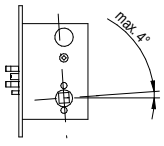

SALTO recommends the use of a mortise lock, with a maximum 4º pre-turn.

SALTO recommande d'utiliser des serrures à mortaiser avec un angle au repos de 4° maximum.

SALTO recomienda utilizar cerraduras con un pregiro máximo de 4º.

SALTO 建议使用最大初始角度为 4°的插芯锁。

초기 최대 4º 프리턴. SALTO는 사전 회전이 최대 4º인 모티스락의 사용을 권장합니다.

SALTO Tubular latch With Ei9xxA2.. Only!

To be used only with SALTO compatible escutcheons!

A utiliser uniquement avec les ensembles plaques-béquilles SALTO compatibles!

¡Utilizar solamente con escudos SALTO compatibles!

仅限与 SALTO 兼容的锁眼盖一起使用！

SALTO 호환 에스커천에만 사용!

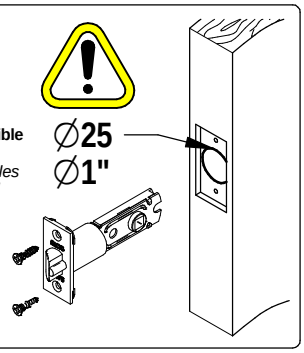

227596-ED.1-17/04/2023

(Eng) Select handing (E) Seleccione mano (D) *Drückerrichtung wählen* (F) *Choisir le sens de la bèquille*
(I) *Scegliere il verso* (P) *Selecione mão* (V) 选择把手方向 (KR) 핸드링 선택

1

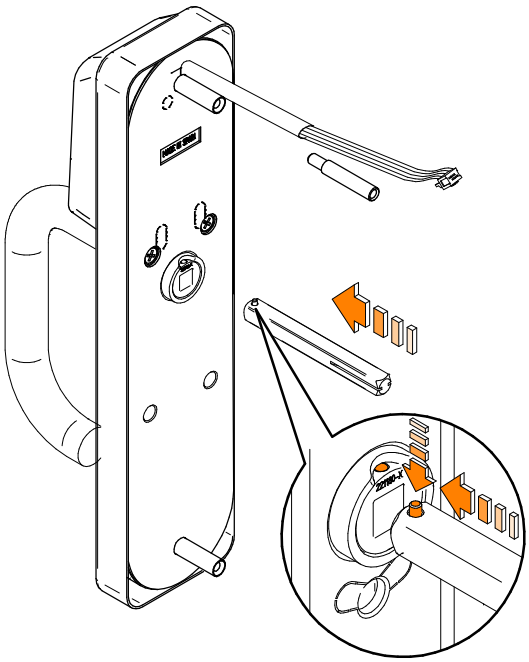

2

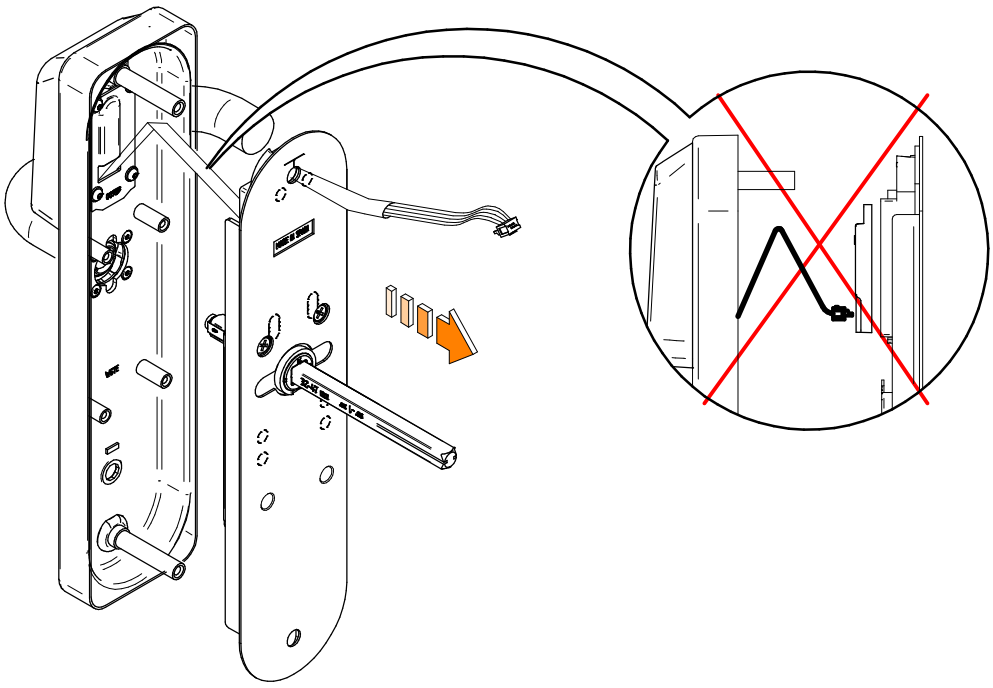

3

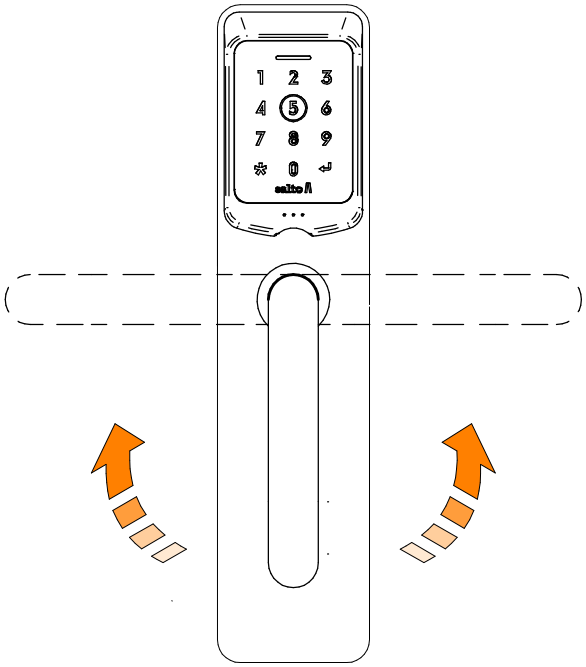

4

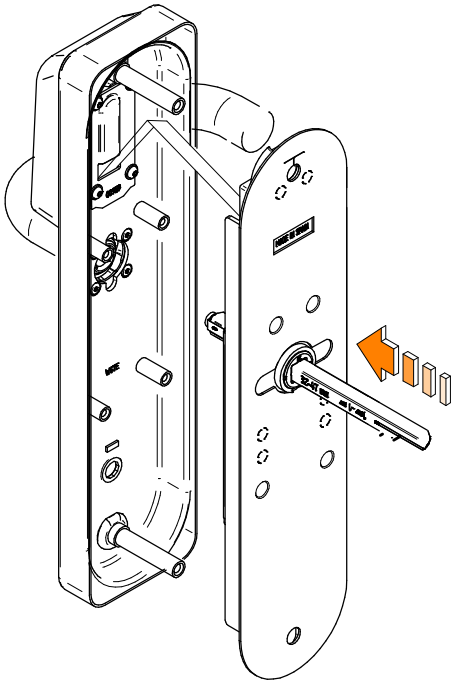

5

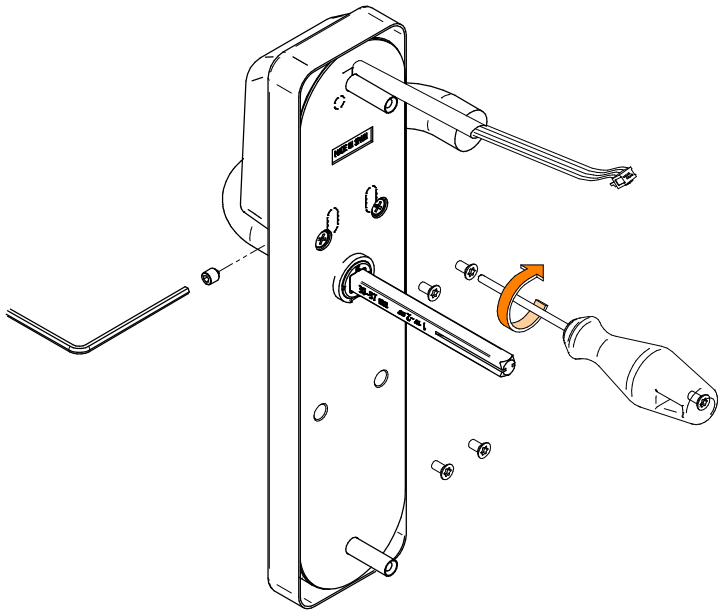

E5 models

CLICK HERE

Eng Installation E *Instalación* D Installation F *Installation*
I Installazione P *Instalação* ZH 安装 KR 설치

1

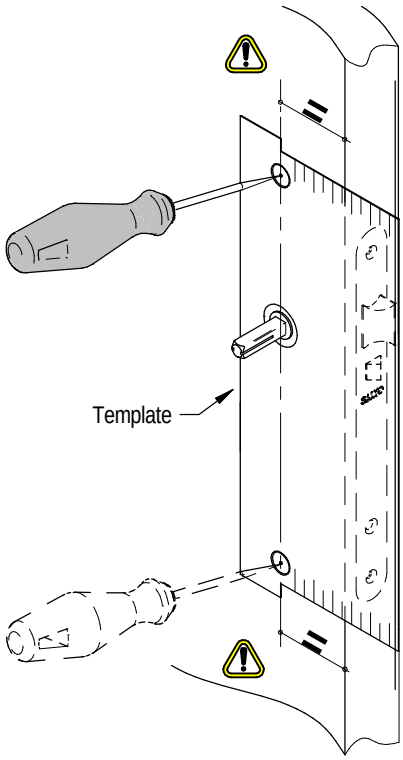

2

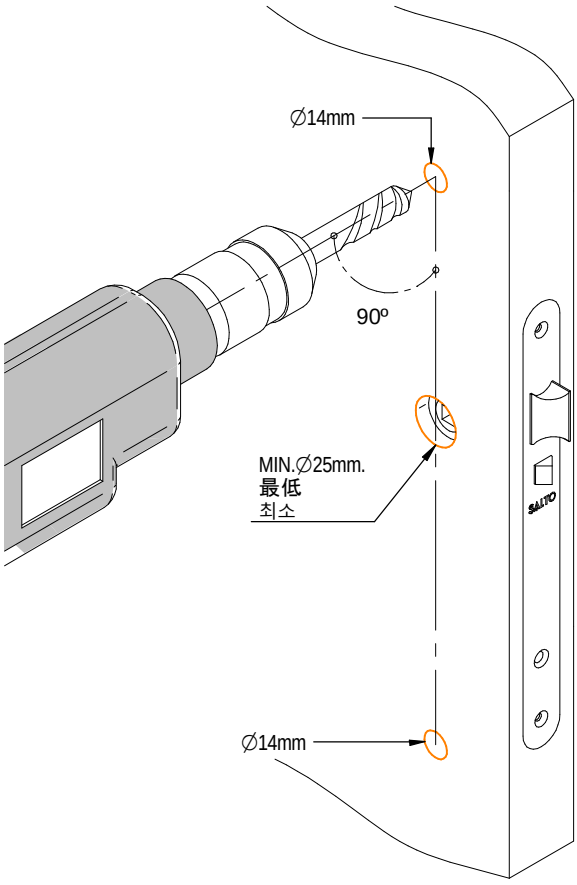

3

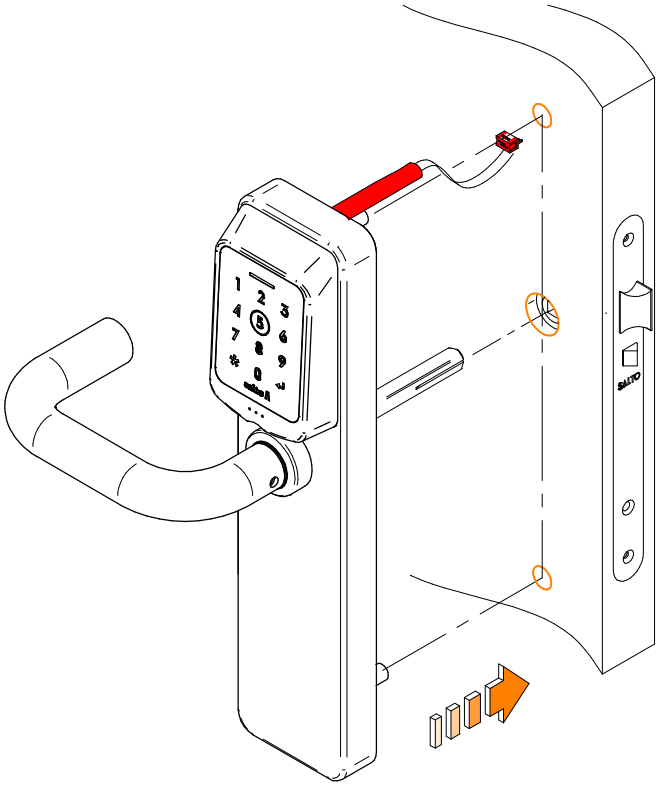

4

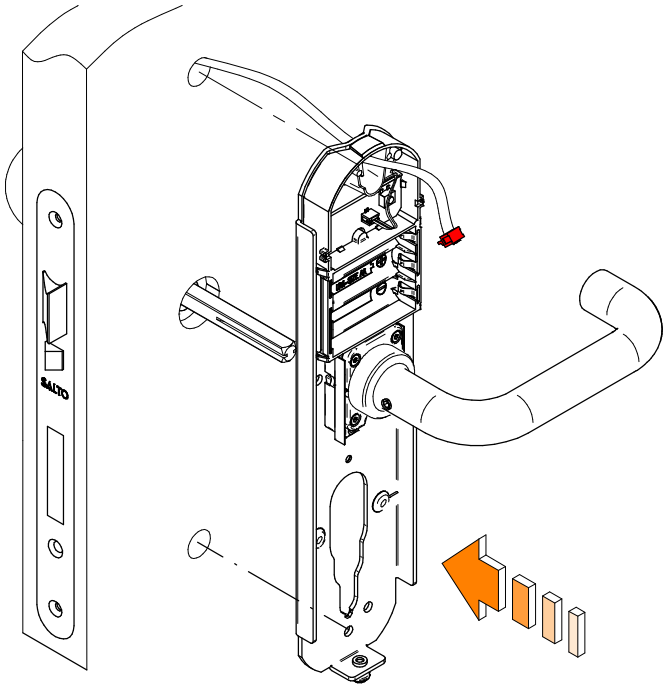

5

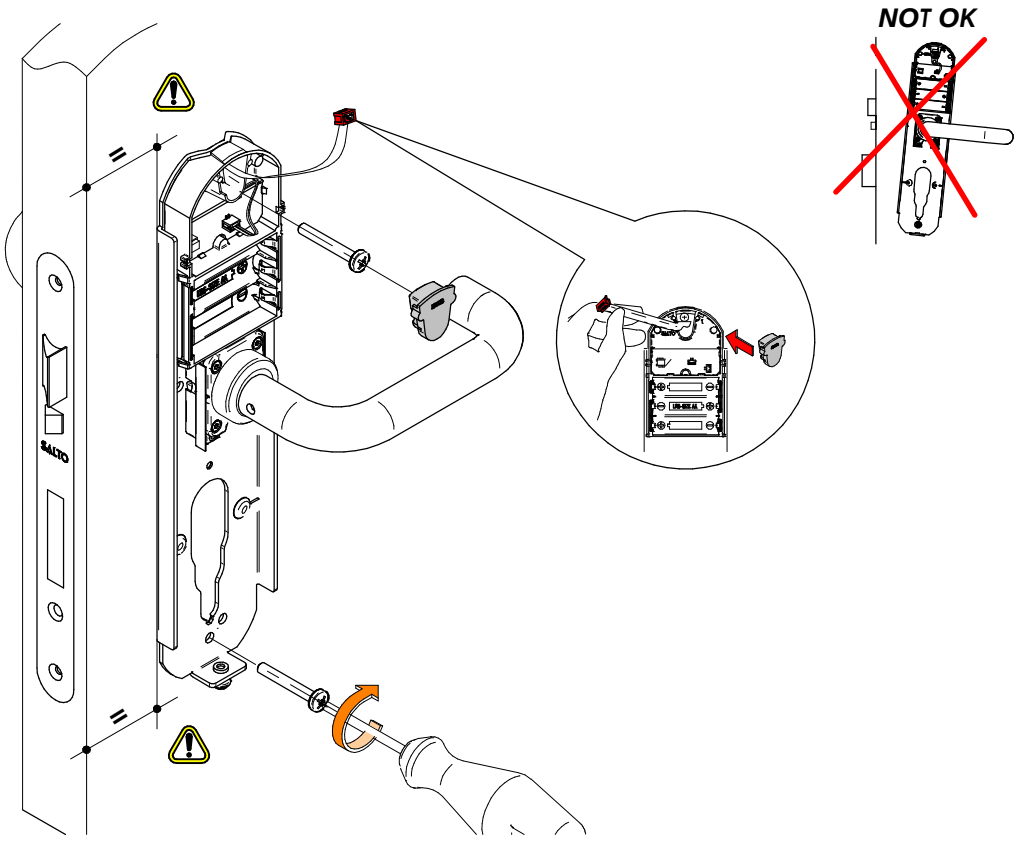

6

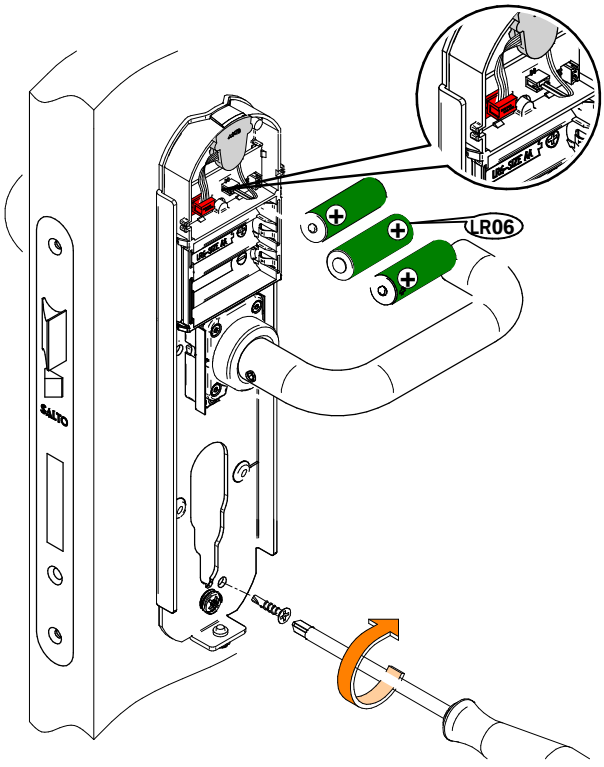

7

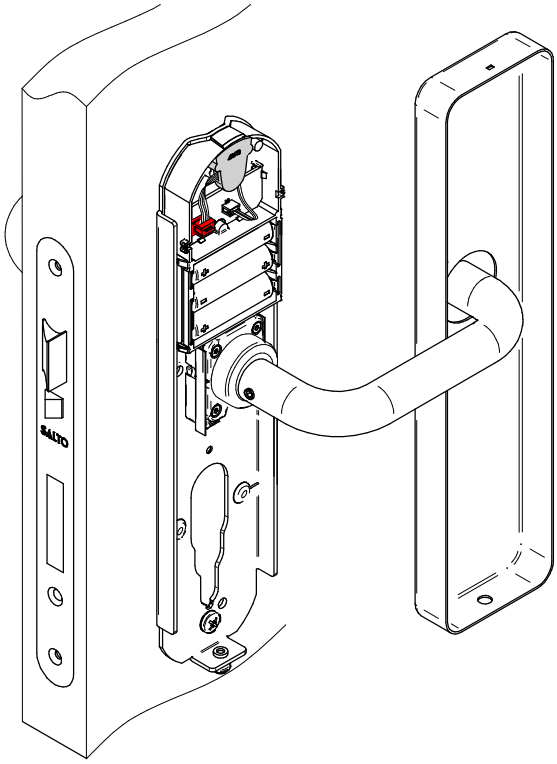

8

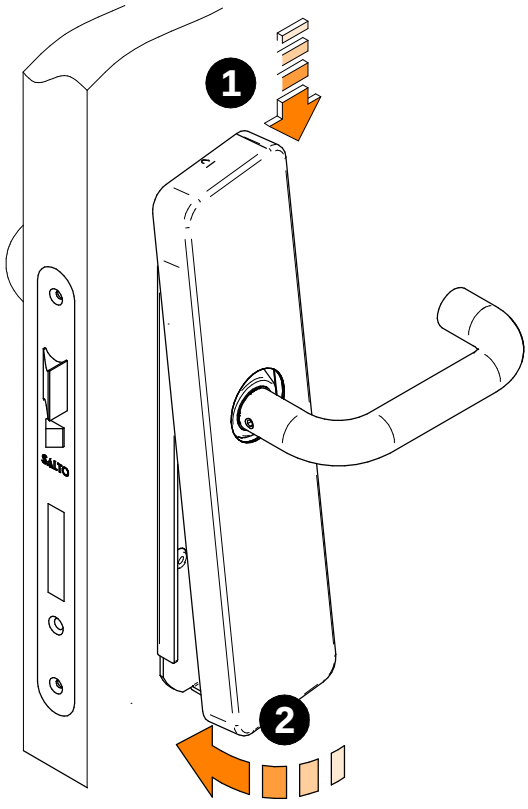

9

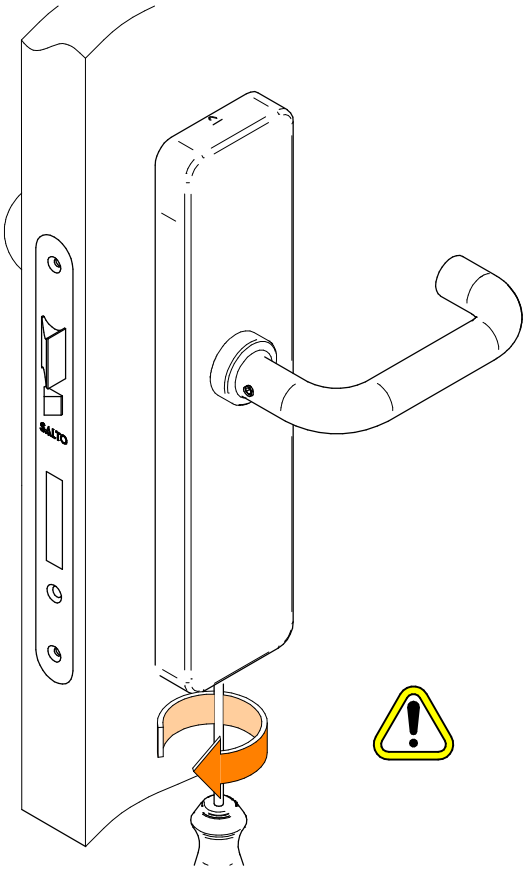

Eng	**AT THIS POINT DO NOT CLOSE THE DOOR PROGRAM THE LOCK FIRST**
E	**NO CIERRE LA PUERTA. PROGRAME LA CERRADURA**
D	**TÜR NICHT SCHLIESSEN. ZUERST SCHLOSS PROGRAMMIEREN**
F	**NE FERMEZ PAS LA PORTE. PROGRAMMEZ LA BÉQUILLE AVANT**
I	**PROGRAMARE LA SERRATURA PRIMA DI CHIUDERE LA PORTA**
ZH	此时请勿关门, 首先对门进行编程
KR	이때 문을 닫지 말고 먼저 잠금 장치를 프로그래밍하십시오.

Eng Battery change F *Remplacer les* piles E Cambio de pilas ZH 更换电池 KR 배터리 교체

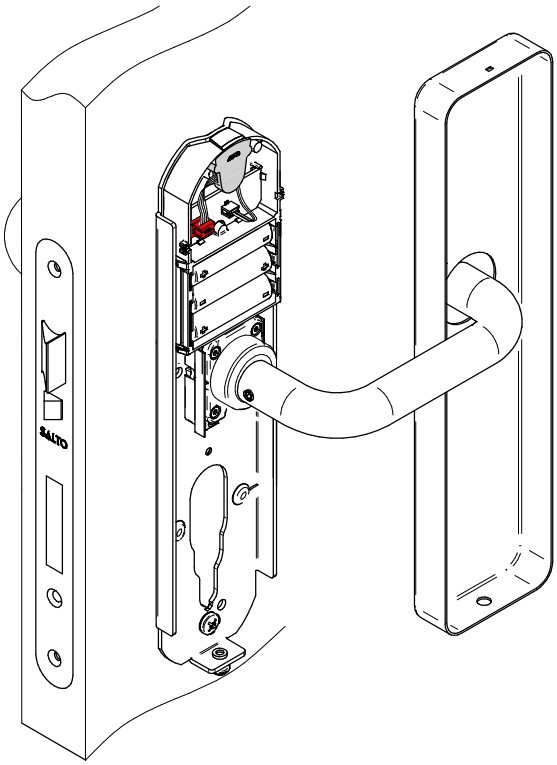

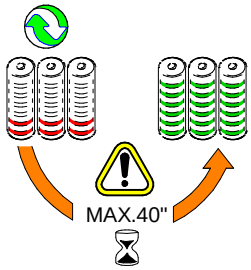

Change/*Remplacer*/Cambio
更换/변경

E i 9**51** xx.. series
E i 9**P1** xx.. series

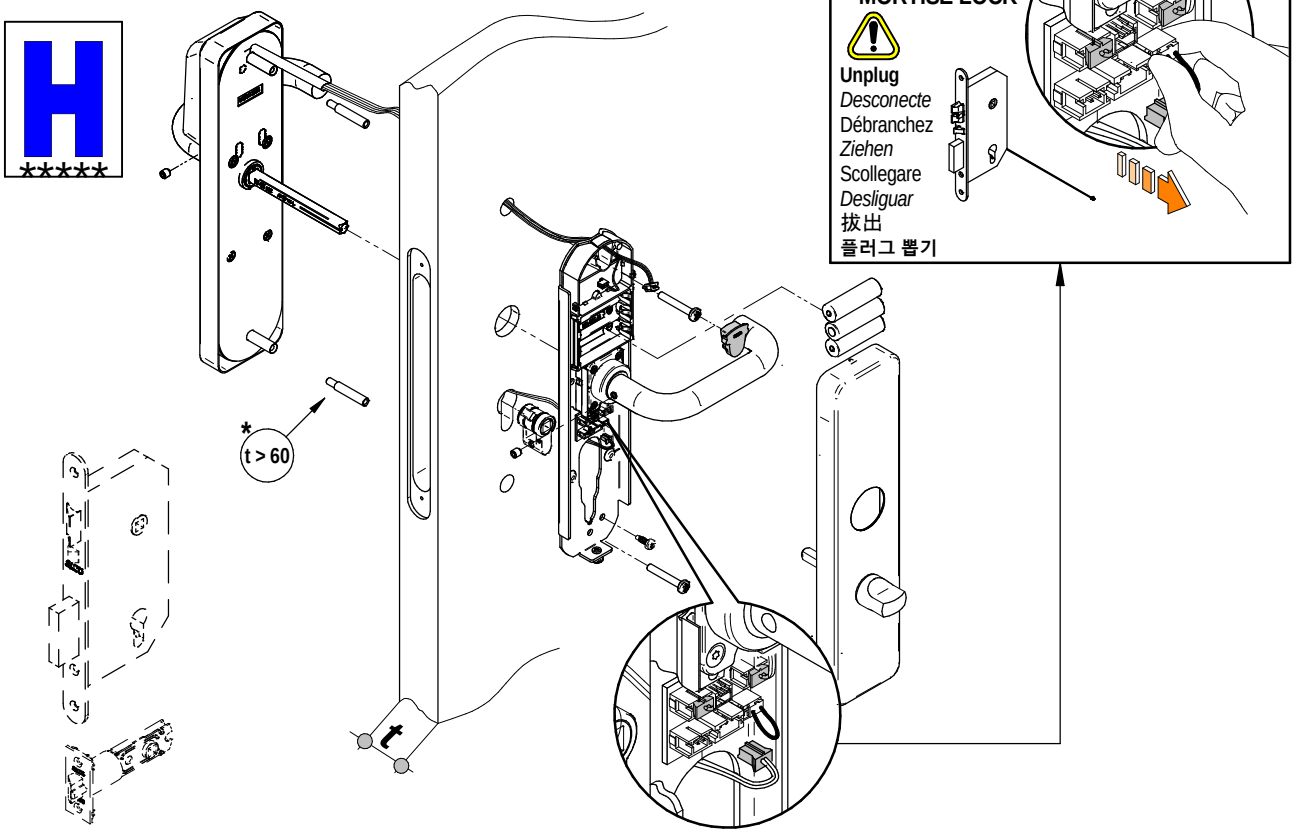

Other models / Otros modelos / Andere Modelle / D'autres modèles / Altri modelli / Outros modelos / 其他型号 / 기타 모델

Eng
E i 9**56** xx..
-Entry lock with privacy/ lockout funtion
-*Modelo entrada con privacidad*
-Beschlag mit Privacy-Funktion
-*Béquille electronique avec fonction privacité*
-Modello di entrata con privacy
-Modelo entrada com privacidade
-带隐**私**/锁**定功能的**入门锁
프라이버시/록아웃 기능이 있는 입구 잠금 장치
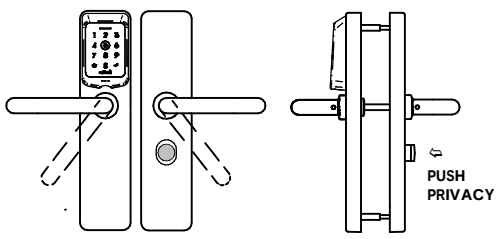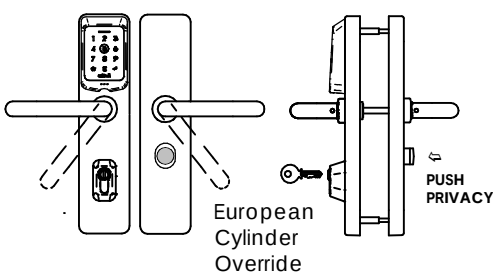
Eng
E i 9**P6** xx..
-Entry lock with privacy/lockout funtion and key override
-*Modelo entrada con privacidad y llave de emergencia con registro*
-Beschlag mit Privacy-Funktion und Notschlüssel
-*Béquille electronique avec fontion privacité et clef de secours*
-Modello entrata con privacy e chiave di emergenza con registrazione
-Modelo entrada com privacidade e chave de emergencia com registo
-*带隐**私/锁定功能和钥匙解锁的**入门锁*